





An example of how to wire the PSR-248 or PSR-248-NC boards


Example Status Connection Diagram

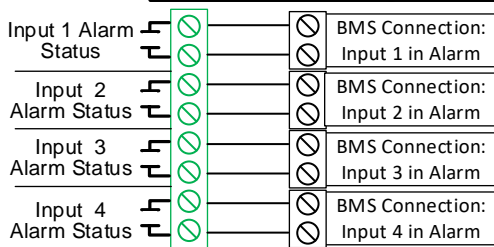

Example Light Indicator Connection Diagram




Example Remote Board Status Connection Diagram




Example Outputs Connection Diagram

In this example, the VFD is programmed to shutdown when the NO contact closes. Depending on VFD programming, it can also shut down when the NC contact opens

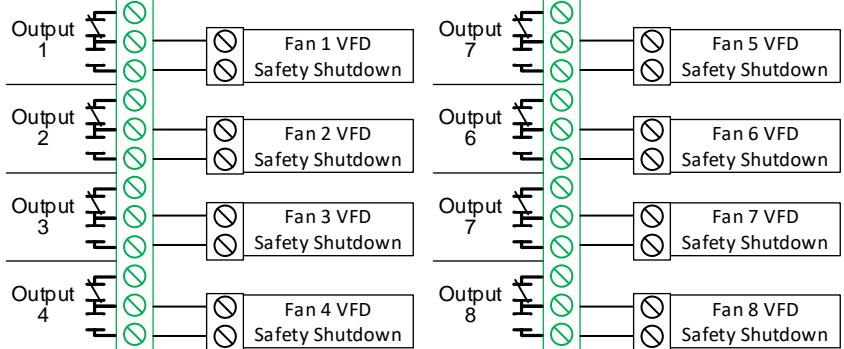


Example Remote Reset Connection Diagram

Board can also be reset via on board push button.

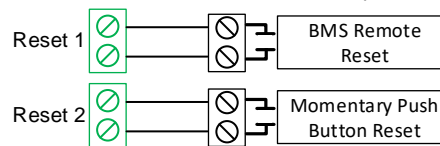

Example Safety Inputs Connection Diagram

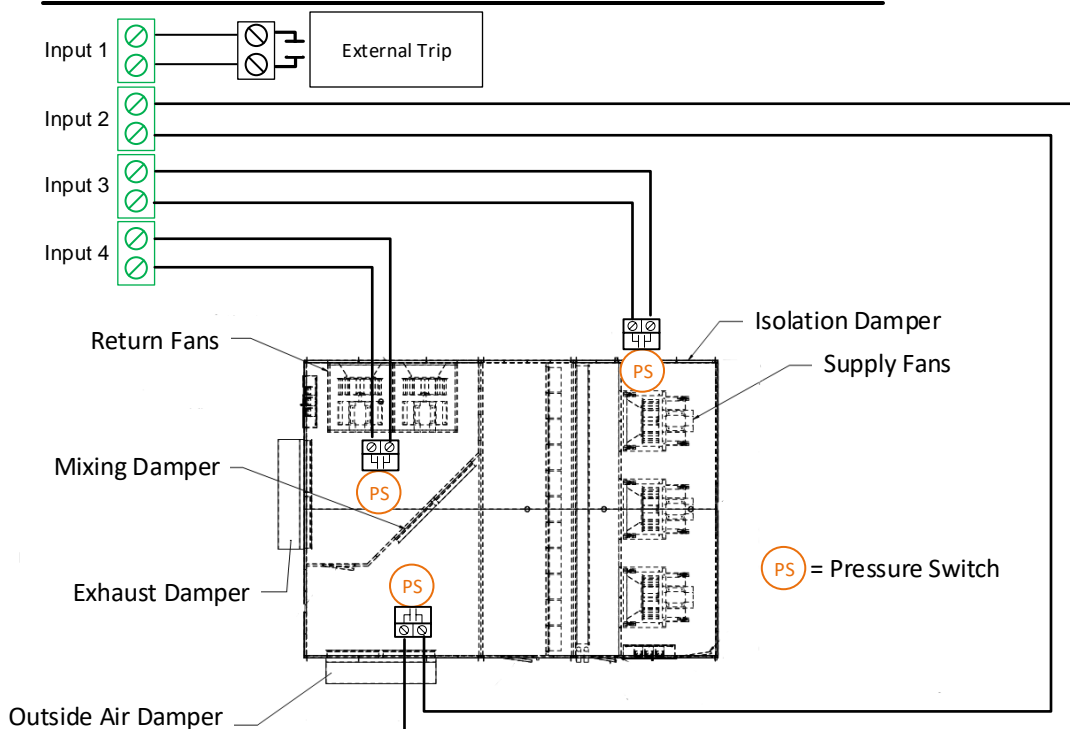

WARNING: THE BOARD MUST BE MOUNTED ON A SOLID, VERTICAL SURFACE. EXCESSIVE / VIOLENT VIBRATION MAY CAUSE RELAYS TO ACTIVATE WITHOUT CAUSE IF MOUNTED IN ANOTHER POSITION. NOT FOR USE IN FIRE / LIFE SAFETY SYSTEMS.